

LS 9208

*Setup Instructions for
Gilbarco G-Site*



Introduction

This document provides instructions for programming the Symbol LS 9208 scanner for use with a Gilbarco G-Site system.

Required Hardware

- Cable
 - 25-60262-20 (RS232 Cable, True TTL, DB9 Female, Tx/D on 2, 6 ft. Straight), or
 - 25-60262-21 (RS232 Cable, True TTL, DB9 Female, Tx/D on 2, 8 1/2 ft. Coiled).

Note: If the G-Site system has an RJ-45 connection, a DB9 to RJ45 Adapter is required (Symbol p/n 25-60220-01).

Alternatively, a Gilbarco DB9 to RJ-45 adapter (Gilbarco p/n Q13180-06) and a Gilbarco RJ-45 to RJ-45 Cable (Gilbarco p/n Q13182-02) can also be used.

- Power Supply
 - 50-14000-008 (110VAC for N. America), or
 - 50-14000-009 (220VAC for Europe and Asia), or
 - 50-14000-010 (100VAC for Japan).

Scanner Setup

 
The following parameters need to be set:

- Set Defaults
- Fujitsu RS-232
- Baud Rate 2400
- Parity Even
- 7-Bit
- 1 Stop Bit*
- Transmit UPC-A Check Digit*
- Transmit UPC-E Check Digit*

* Already set by default

Scan the following bar codes in numerical order.

1




Set Defaults

2



Fujitsu RS-232

 3




Baud Rate 2400

4



Even

 5



7-Bit



73-60833-SI03
Revision A - September 2004

Symbol Technologies, Inc.
One Symbol Plaza
Holtsville, N.Y. 11742-1300

<http://www.symbol.com>